


Web: www.JBFC.com - Email: sales@JBFC.com
 Ph: 714-771-7007 Fax: 714-771-7075
 1080 N. Batavia St. #A, Orange, CA 92867
Johnson Brothers, F.C., Inc.

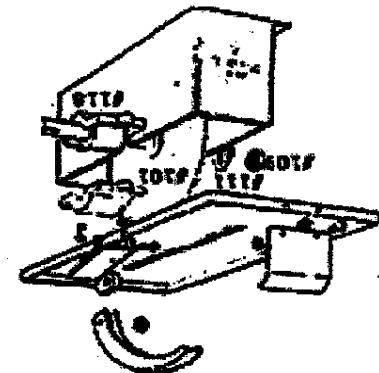

THIS WARRANTY IS IN LIEU OF ALL WARRANTIES EXRESSED OR IMPLIED, AND NO RESPONSIBILITY IS ASSUMED FOR DAMAGE DUE TO ACCIDENT, ABUSE, LACK OF REASONABLE CARE, PRODUCT THAT HAS NOT BEEN MAINTAINED OR USED IN ACCORDANCE WITH INSTRUCTIONS PACKAGED WITH IT.

RETURNEDE PARTS REQUIRE SLEEVES SLIP COMPATIBLE TO NORMAL USAGE ARE NOT PROVIDED BY THIS WARRANTY.

PROVIDED THE ORIGINAL SLEEVES SLIP COMPATIBLE TO THE MACHINE WHEN BE REPAIRED AT NO CHARGE (EXCEPT FOR TRANSPORTATION) AT OUR PLANT, GUARANTEE PERIOD DUE TO DEFECTIVE MATERIAL OR WORKMANSHIP, IT WILL AGAINST DEFECTIVE MATERIAL OR WORKMANSHIP FOR A PERIOD OF ONE YEAR.

AFTER PURCHASE, SHOULD THIS ITEM REQUIRE SERVICE DURING THE WARRANTY PERIOD, WE WILL COVER THE COST OF REPAIRS.

LIMITED WARRANTY: ROCK RASCAL PRODUCTS ARE GUARANTEED

#101 6" DIA. BLADE #1082" PULLEY #109 HEX NUT LH #111 BLADE FLANGE #118 SHAFT & BEARING

COOLANT, YOU WILL RUIN THE DIAMOND SAW BLADE.


IS NEEDED, ADD THROUGH TABLE SLOT CAUTION: NEVER CUT ROCKS WITHOUT COOLANT, TOO MUCH COOLANT WILL CAUSE EXCESSIVE SPLASHING. PLACE TABLE ON TANK, SECURE WITH FLAT HEAD MACHINE SCREW. WHEN ADDITIONAL COOLANT RUST AND SHORTEEN BLADE LIFE. ADD COOLANT TO TANK SO BLADE IS 1/4" INTO COOLANT: OIL IS THE BEST LUBRICANT SECOND BEST IS LUBE COOL 4800 MIXED TO RUST PROPERTIES. WE DO NOT RECOMMEND PLAIN WATER. PLAIN WATER WILL CAUSE PACKAGE DIRECTIONS, LUBE COOL MIXED WITH WATER HAS LUBRICANT AND ANTI-

LUBRICATION: THE ROCK RASCAL MODEL "J" TRIM SAW IS EQUIPPED WITH SEALED BALL BEARINGS. NO LUBRICATION IS REQUIRED.

S.F. P.M., FOLLOW BLADE MANUFACTURES RECOMMENDATION.

DIAMETER BLADES MAY BE USED WITH A MOTOR PULLEY SIZED TO OBTAIN PROPER RPM, USE EITHER A 1-1/2" OR 2" PULLEY FOR REGULAR AND HIGH SPEED. SMALLER FACETS THIN BLADE, USE A 4" PULLEY ON THE MOTOR. IF MOTOR SPEED IS 3450 RPM, USE EITHER A 1-1/2" OR 2" PULLEY FOR REGULAR AND HIGH SPEED. MOUNTED BEHIND OR BELOW THE MACHINE. WHEN USING A REGULAR BLADE, IF MOTOR IS 1725/1750 RPM, USE A 2" PULLEY ON THE MOTOR SHAFT. FOR HI-SPED BOLTS OR SCREWS. TO INSTALL DIAMOND SAW BLADE, REMOVE HEX NUT (LEFT HAND THREAD), PLACE BLADE BETWEEN FLANGES AND TIGHTEN NUT. THE MOTOR MAY BE MOUNTED BEHIND OR BELOW THE MACHINE. WHEN USING A REGULAR BLADE, IF MOTOR IS 1725/1750 RPM, USE A 2" PULLEY ON THE MOTOR SHAFT. FOR HI-SPED PIECE OF HEAVY PLYWOOD IF PORTABILITY IS DESIRED, FASTEN SECURELY WITH BOLTS OR SCREWS. TO MOUNT ON A TABLE, WORK BENCH OR ON A PIECE OF HEAVY PLYWOOD IF PORTABILITY IS DESIRED, FASTEN SECURELY WITH BOLTS OR SCREWS. TO MOUNT ON A TABLE, WORK BENCH OR ON A

Model "JM" with Motor shown

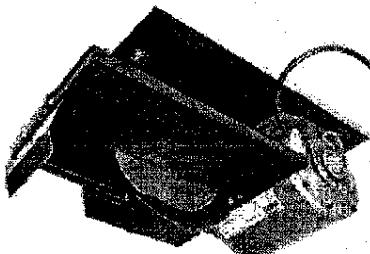

ROCK RASCAL
Model "J & JM"
Facetters Trim-Saw